

## EAGLE TORCH MINI-ANGLE V2 SAFE-STOP 20CT/ DISPLAY - PT116B

### About the product

**KEEP AWAY FROM CHILDREN**  
**WARNING / SAFETY**



- DO NOT puncture or use near open flame
- DO NOT expose to temperatures above 50°C (122°F)
- DO NOT place in direct sunlight for long periods of time
- Lighters are NOT toys keep AWAY from children
- Use AWAY from the face, body, clothing, and flammable material
- Use ONLY in a well-ventilated area
- Ensure the flame is extinguished after use
- Butane fuel is cold, and flammable avoid contact with skin or clothing

### TROUBLESHOOTING

- My lighter will spark but will NOT ignite:
- Your lighter's fuel tank may be empty refer to Step 3 of BUTANE REFILL INSTRUCTIONS
- Your butane pressure may be set too low
- Your piezo spark mechanism may be too far away from the butane jet nozzles adjust it by carefully bending it closer toward the jet nozzle.
- My flame does NOT light consistently and/or fluctuates: Your butane fuel is too low (refer to BUTANE REFILL INSTRUCTION)



<https://rcdwholesale.com/eagle-torch-mini-angle-20ct-pack.html>